



Changing the print cartridge

To change the print cartridge


1. Open the print-cartridge door.

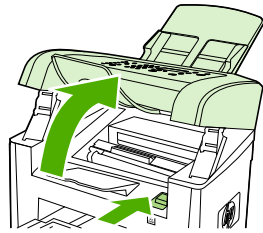

HP LaserJet 3050

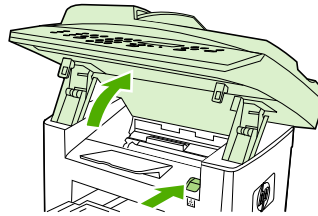


HP LaserJet 3052/3055

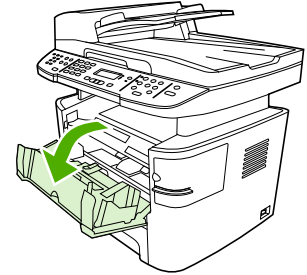


HP LaserJet 3390/3392


2. Grasp the handle on the print cartridge and then pull the cartridge straight out to remove it. See the recycling information inside the print cartridge box.

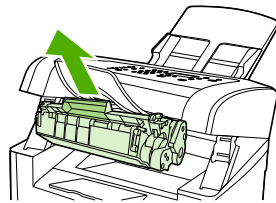

HP LaserJet 3050

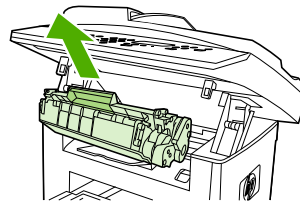


HP LaserJet 3052/3055

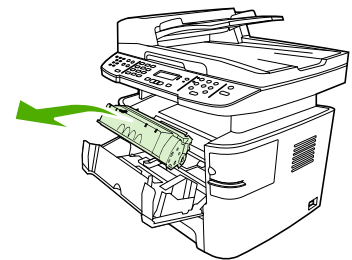


HP LaserJet 3390/3392


3. Remove the new print cartridge from its packaging, remove the orange cover from the print cartridge, and then pull the orange tab straight out to remove the sealing tape.

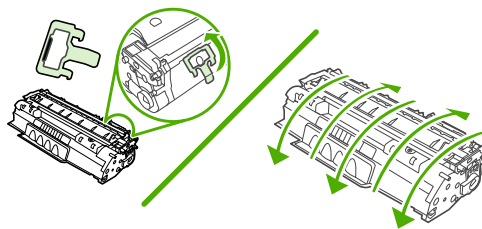


4. Insert the cartridge into the all-in-one until it is *firmly* in place.

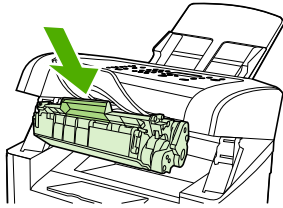

HP LaserJet 3050

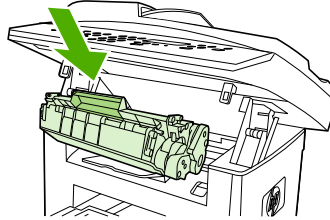

HP LaserJet 3052/3055

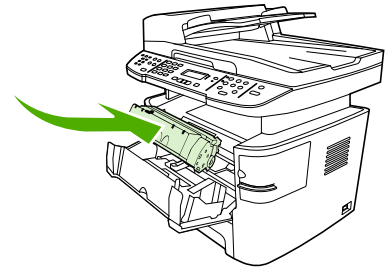


HP LaserJet 3390/3392


5. Close the print-cartridge door.



HP LaserJet 3050

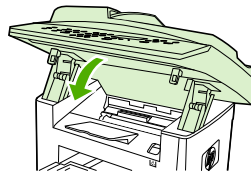

HP LaserJet 3052/3055

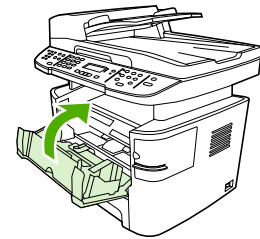

HP LaserJet 3390/3392



CAUTION If toner gets on your clothing, wipe it off with a dry cloth and wash the clothing in cold water. *Hot water sets toner into the fabric.*