


Replacing the toner cartridge



Click this link to open an animation about replacing a toner cartridge.

When a toner cartridge has reached the end of life, the machine will stop printing (see "Available supplies" on page 55).


- 1 Open the front cover and pull the toner cartridge out.

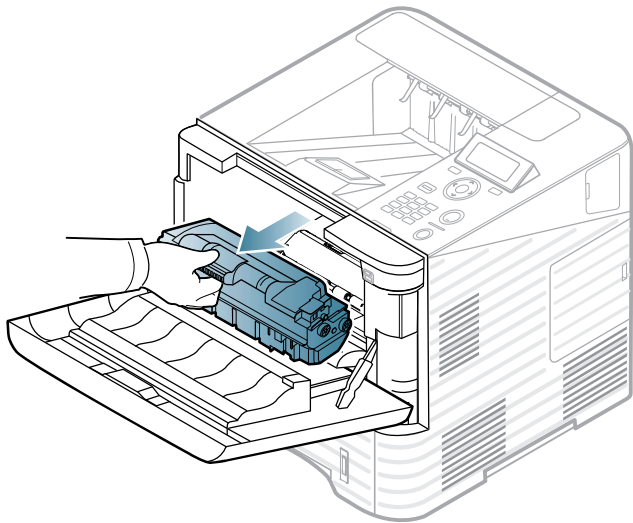

- 2 Remove the new toner cartridge from its bag.

3


Thoroughly shake side to side the cartridge five or six times to distribute the toner evenly inside the cartridge.

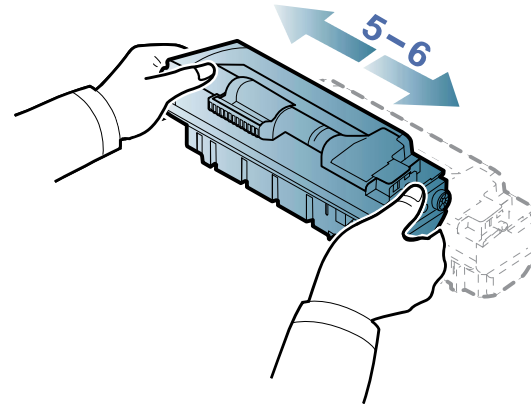

If toner gets on your clothing, wipe it off with a dry cloth and wash clothing in cold water: hot water sets toner into fabric.

Replacing the toner cartridge

- 4 Hold the toner cartridge by the handle and slowly insert the cartridge into the opening in the machine.

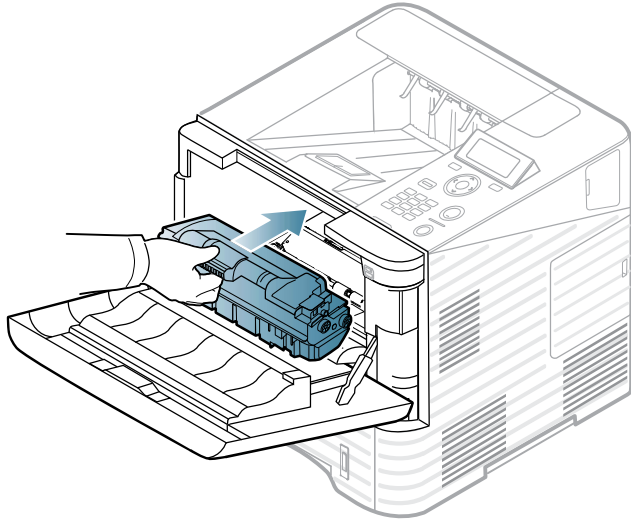

- 5 Close the front cover. Ensure that the cover is securely closed.