

1 Imaging drum

CAUTION: Do not touch the imaging drum. Fingerprints can cause print-quality problems.


2 Memory chip

CAUTION: If toner gets on clothing, wipe it off by using a dry cloth and wash the clothes in cold water. Hot water sets toner into fabric.


NOTE: Information about recycling used toner cartridges is in the toner-cartridge box.

Remove and replace the toner cartridge


1. Lift the scanner assembly.

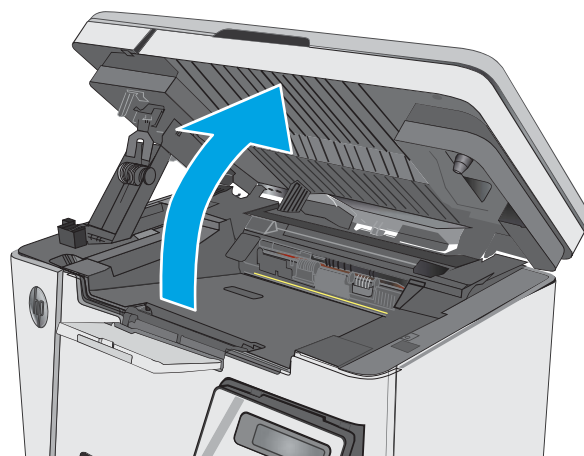

2. Remove the used toner cartridge from the printer.

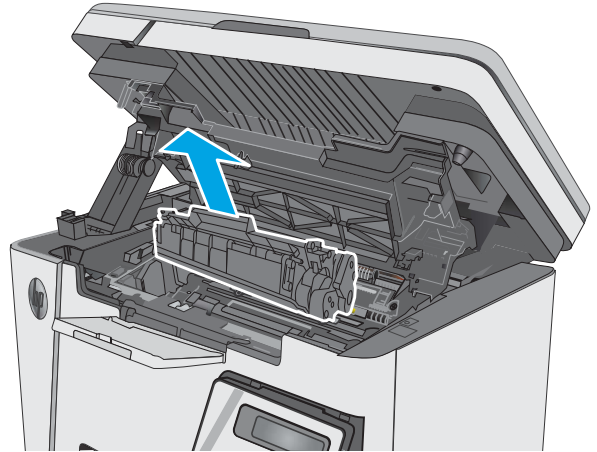


3. Remove the new toner cartridge package from the bag. Place the used toner cartridge in the bag for recycling.

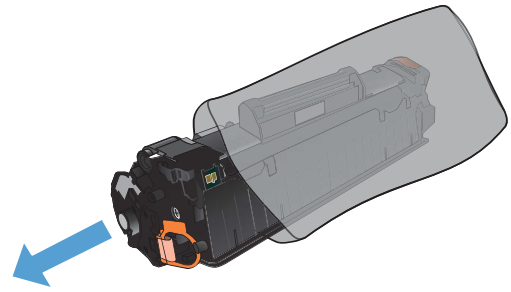


4. Grasp both sides of the toner cartridge and distribute the toner by gently rocking the cartridge.


CAUTION: Do not touch the shutter or the surface of the roller.

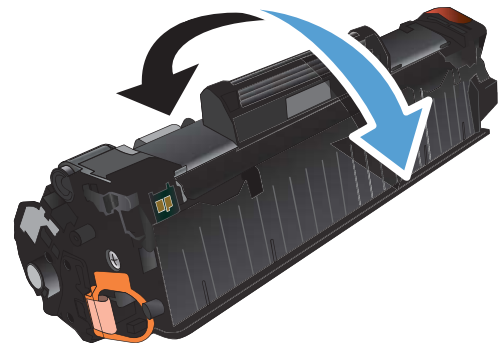

5. Bend the tab on the left side of the cartridge until the tab breaks loose. Pull the tab until all the tape is removed from the cartridge. Place the tab and tape in the toner cartridge box to return for recycling.

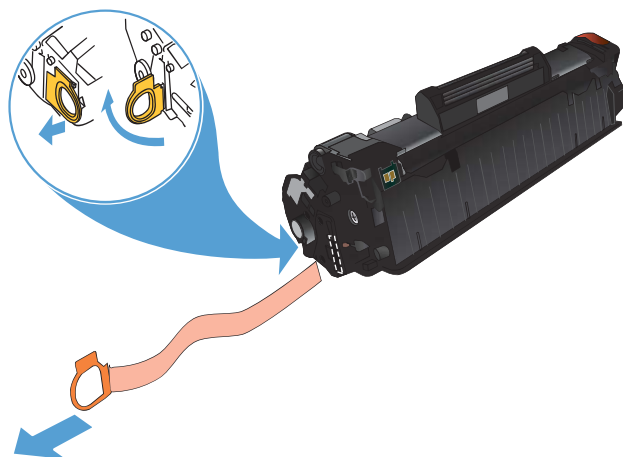

6. Install the new toner cartridge until it is firmly seated.

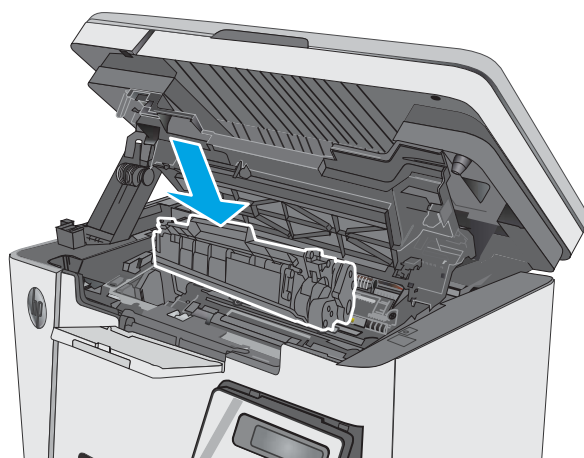

7. Close the scanner assembly.

