Replace Toner

The **Replace Toner** message appears when the toner cartridge needs to be replaced. When the **Replace Toner** message appears, the following LED indications is shown on the control panel.

Continue Mode: Both the **Ready** (O) and **Error** (1) LEDs will turn on together, then the **Error** LED (1) will turn off after 0.5 seconds and the **Ready** LED (O) will turn off after 1 second, they will then both be off for a further 1 second. This procedure is repeated until the error is corrected.

Stop Mode: The **Error** LED (1) will blink once in 1.5 seconds intervals.




Continue mode Stop mode

The Brother machine has separate consumables the toner cartridge and the drum unit. Verify you replace only the Toner Cartridge and not the drum unit.


Please follow the steps below to clear the **Replace Toner** message.

NOTE: Illustrations shown below are from a representative product and may differ from your Brother machine.


1. Open the cover and take out the drum unit assembly.

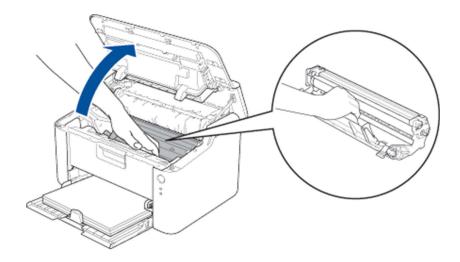


2. Replace the toner cartridge.

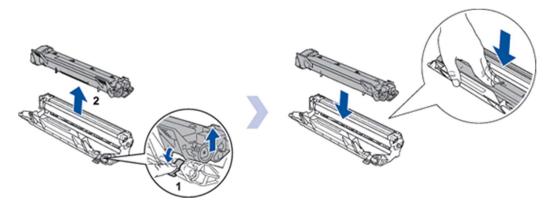

3. Slide the green tab on the drum unit from side to side 3 times. Be sure to return the tab to the home position (1).

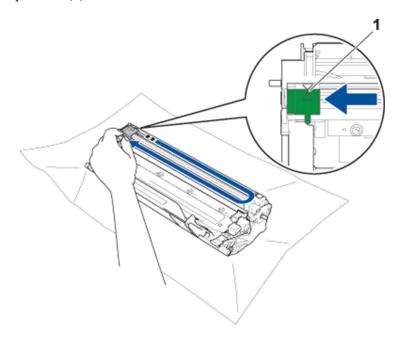

4. Put the drum unit assembly back into the machine and close the cover.

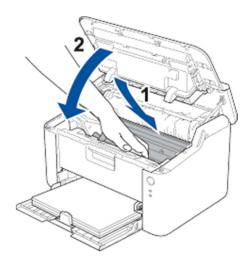


Replace Toner

The Brother machine has separate consumables the toner cartridge and the drum unit. Verify you replace only the Toner Cartridge and not the drum unit.


Follow the steps below to clear the **Replace Toner** message.

NOTE: Illustrations shown below are from a representative product and may differ from your Brother machine.


1. Open the covers.

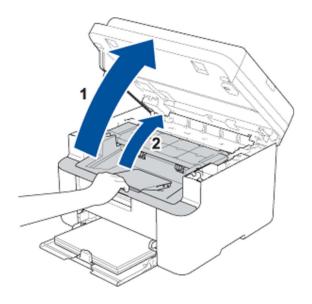


2. Take out the drum unit assembly out of the machine.

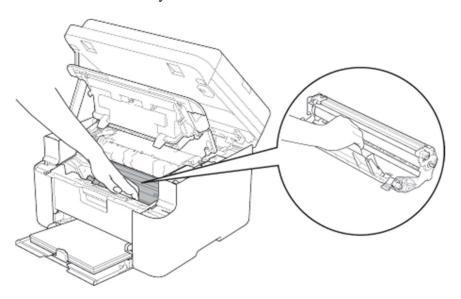

3. Replace the toner cartridge.

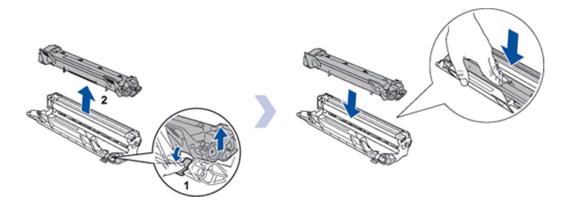

4. Slide the green tab on the drum unit from side to side 3 times. Be sure to return the tab to the home position (1).

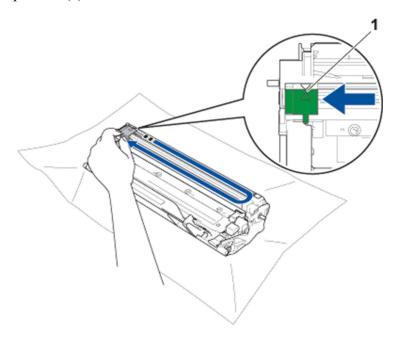

5. Put the drum unit assembly back into the machine and close the cover.

