


Replace photoconductor

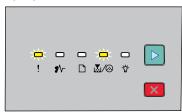

! - Blinking

D - On

When any of the light sequences occur, order a new photoconductor kit. While the printer may continue to function properly after the photoconductor kit has reached its official end-of-life, print quality significantly decreases.


Note: The photoconductor kit is a single item.



To replace the photoconductor kit:

- 1 Turn off the printer.
- 2 Pull the photoconductor kit and toner cartridge together as a unit out of the printer by pulling on the toner cartridge

Note: The photoconductor kit and toner cartridge form a unit.

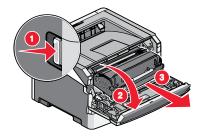


Replacing the photoconductor kit

The printer displays the Photoconductor life warning or Replace photoconductor light sequence when the photoconductor kit reaches the page maximum.

Light sequences

Photoconductor life warning

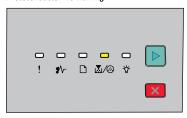

∑/⊗ - On






Place the unit on a flat, clean surface.



3 Press the button on the base of the photoconductor kit, and then pull the toner cartridge up and out using the

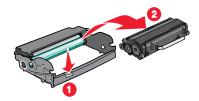


4 Unpack the new photoconductor kit.


Warning-Potential Damage: Be careful not to touch the photoconductor drum. Doing so may affect the print quality of future print jobs.



5 Insert the toner cartridge into the photoconductor kit by aligning the rollers on the toner cartridge with the tracks. Push the toner cartridge in until it clicks into place.

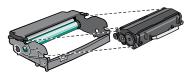

6 Install the unit into the printer by aligning the arrows on the guides of the unit with the arrows in the printer. Push the unit fully in.

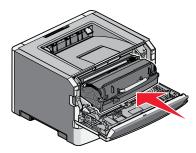

7 After replacing the photoconductor kit, reset the photoconductor counter: Open the front door and then press and hold X until all the lights cycle.

Warning—Potential Damage: Resetting the photoconductor counter without replacing the photoconductor kit may damage your printer and void your warranty.

8 Close the front door.



