


## Replacing toner cartridges


1. Slide the release latch on the right side of the printer, and then open the top door.




2. Remove the toner cartridge by lifting the handle, and then gently pulling it away from the imaging kit.

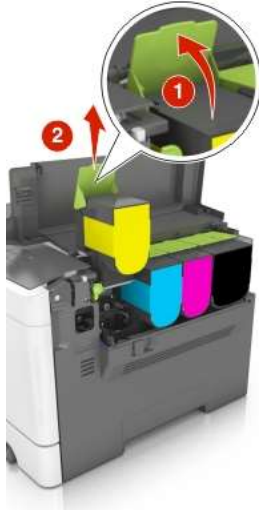

3. Unpack the new toner cartridge, and then remove its packaging.

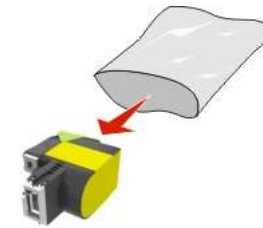

4. Align the new toner cartridge, and then press the cartridge down until it fits into place.

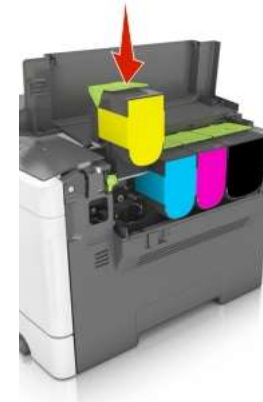

5. Close the top door.





## Replacing toner cartridges


1. Open the top door.



2. Remove the toner cartridge by lifting the handle, and then gently pulling it away from the imaging kit.



3. Unpack the new toner cartridge, and then remove its packaging.

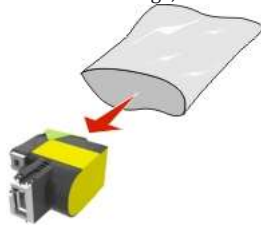

4. Align the new toner cartridge, and then press the cartridge down until it fits into place.



5. Slide and hold the release latch on the right side of the printer, and then slowly close the top door.

